Surgical Technique

Step A

Step B

Step C

Step D

Step E

Step F

Step G

Step H

Step I

Step B

Applying Rectus Muscle Splint (RMS)

Simultaneously advance both RMS devices towards the fascial defect, creating tension on the CDR (Fig. 1). Maintain each RMS, parallel to the fascial defect edge (Fig. 2) and approximately 2cm (a thumb's width) from it (Fig. 3).

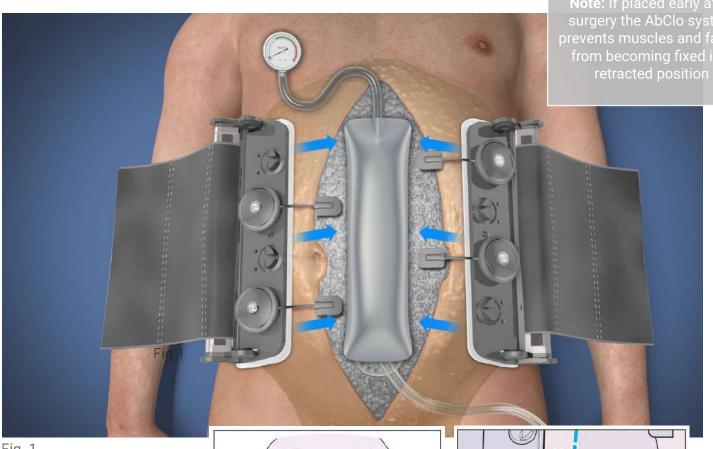


Fig. 1

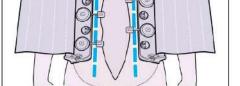


Fig. 2

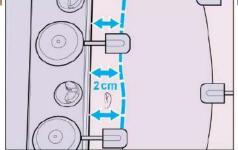


Fig. 3

AbClo